# INSTA-BACK® APPLICATIONS

1. Draw pencil outline around the area to be removed. Cut along line and remove cut out piece.

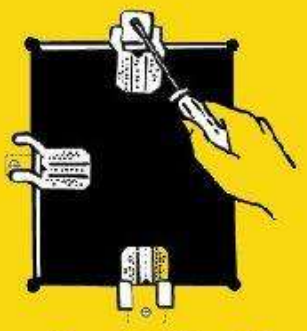

2. Place Repair Clips 6" apart around the hole. Secure with screws 3/4" from the hole edge.

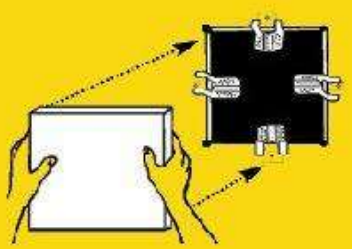

3. Cut a patch to the proper size and place in the hole.

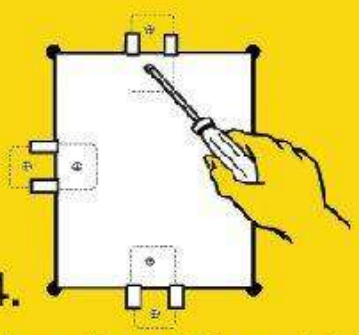

4. Screw through the patch into Repair Clips. Place screws 3/4" from the edge of the patch.

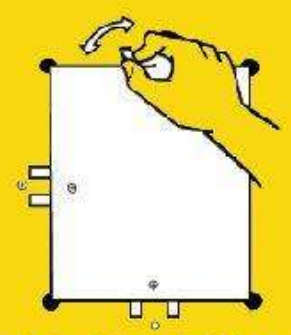

5. Bend the Repair Clip tabs back and forth until they snap off.

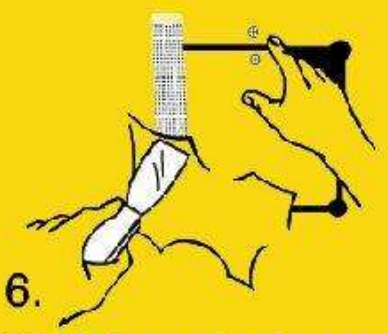

6. Finish the patched area with the appropriate materials.

Presto-on®